

◇ Go GREEN ◇

Kools Tires Balances

Controls rim rust



Adding air can cause rust due to condensation in compressors. Our rust inhibitor keeps rims free of rust making for fast, easy tire removal and a **PERFECT SEAT** when remounting.

A rim that is rust free when KTB Liquid Balancer is installed will remain rust free until the rim is dismantled.

A rim that is known to be scaled with rust can be cleaned easily with KTB Liquid Balancer prior to rim removal. Install KTB Liquid Balancer and in approximately 30 days of normal operation most rust scale will be removed.



KEY BENEFITS

HELPS DETECT VALVE STEM AND TIRE DAMAGE

TIRES RUN COOLER

LUBRICATES FOR QUICK TIRE REMOVAL

ELIMINATES RUST ON TIRE RIMS

BALANCES FOR THE LIFE OF THE TIRE

ENVIRONMENTAL FRIENDLY
USE FOR PREVENTATIVE MAINTENANCE

◇ Go GREEN ◇

Kools Tires Balances

LIQUID TIRE BALANCE

ONE BOTTLE PER TIRE

EXCEPTIONS

19.5"	16 oz.	!
235-85R16	8 oz.	
385 Floats	48 oz.	
425 Floats	64 oz.	
445 Floats	64 oz.	

For trucks in frequent braking applications such as waste haulers, increase the quantity of Liquid Tire Balance up to 64 oz. in the drive tires to achieve maximum cooling capabilities.

INSTALLATION

Shake before use

MOUNTED TIRE:

1. Remove valve core to release air
2. Remove weights and powder from tire
3. Cut cap at line and connect hose to cap
4. Connect hose to valve stem and squeeze bottle to fill

DISMOUNTED TIRE:

- Pour in and mount as usual
(Works with a blaster or cheetah.)